

F7100V VERTICAL ROD FIRE RATED EXIT DEVICE-RERVERSIBLE INSTALLATION INSTRUCTIONS

LHR door shown, RHR door opposite

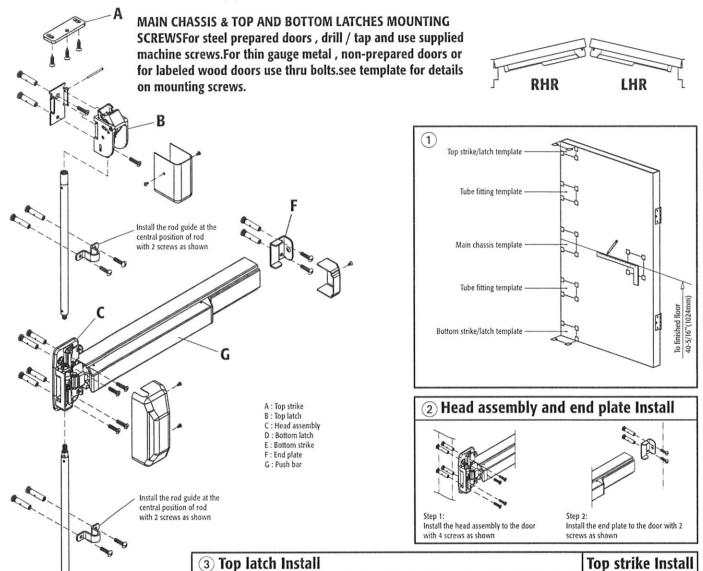

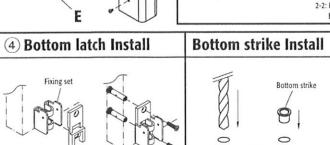

Attach the bottom latch set to the fixing set. Install the bottom latch set to door with 2 screws as shown.

Bottom latch set

Floor

Fix the top latch mounting plate on

the door by sex nut and sex bolt.

Step 1: Drill ø 25/32" (20mm), depth 25/32" (20mm) on floor. Install the bottom strike into floor as shown.

(5) Rod Install Attach the top rod to the tube Attach the top rod (long rod) to the adapter on the head assembly. top latch. The bottom rod should be engaged Attach the bottom rod (long rod) to the tube adapter on with the bottom latch sleeve. the head assembly.

Latch pin




Top latch



2-2: Fix the top latch on the door by sex nut and sex bolt.



Step 3: Make the latch pin through the latch



Install the top strike to the frame with 3 screws as shown.

